


空壓配件 (消音器)

主要適合流體 ~ 空氣

BM 式消音器 (銅)

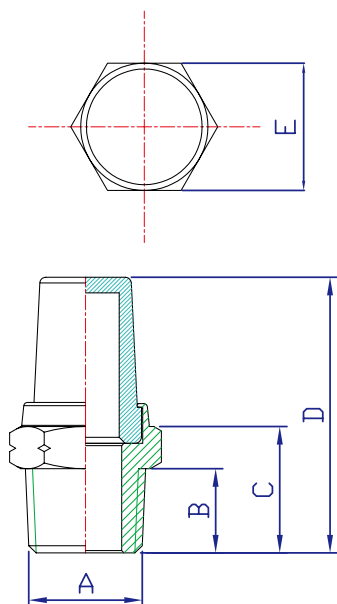


BM-18 BM-28 BM-38



BM-48 BM-68 BM-88

電腦編號	製品記號	尺寸 (mm)				
		A	B ±0.20	C ±0.20	D ±0.50	E ±0.20
BM	18-PT	1/8"PT	7	10.5	23	11
BM	28-PT	1/4"PT	11	15.5	33.3	14
BM	38-PT	3/8"PT	13.5	19	39.6	17
BM	48-PT	1/2"PT	16	22	47.6	22
BM	68-PT	3/4"PT	19.5	26.5	57.4	29
BM	88-PT	1"PT	22	30.7	72.5	34
BM	18-N	1/8"NPT	7	10.5	23	11
BM	28-N	1/4"NPT	11	15.5	33.3	14
BM	38-N	3/8"NPT	13.5	19	39.6	17
BM	48-N	1/2"NPT	16	22	47.6	22
BM	68-N	3/4"NPT	19.5	26.5	57.4	29
BM	88-N	1"NPT	22	30.7	72.5	34
BM	18-G	1/8"PS	6	9.9	22.9	11
BM	28-G	1/4"PS	8	12.5	30.1	14
BM	38-G	3/8"PS	8.9	14.4	34.6	17
BM	48-G	1/2"PS	10	16	41.6	22
BM	68-G	3/4"PS	10.2	17.9	48.8	29
BM	88-G	1"PS	11.9	19.9	61.7	34

BV 式消音器 (銅)

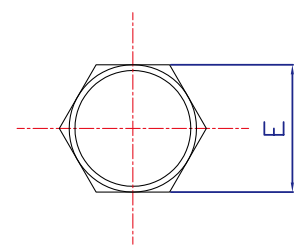

BV-18 BV-28 BV-38



BV-48 BV-68 BV-88

電腦編號	製品記號	尺寸 (mm)				
		A	B ±0.20	C ±0.20	D ±0.50	E ±0.20
BV	18-PT	1/8"PT	7	10.5	12.2	11
BV	28-PT	1/4"PT	11	15.5	17.4	14
BV	38-PT	3/8"PT	13.5	19	21	17
BV	48-PT	1/2"PT	16	22	24.2	22
BV	68-PT	3/4"PT	19.5	26.5	29	29
BV	88-PT	1"PT	22	30.7	33.3	34
BV	18-N	1/8"NPT	7	10.5	12.2	11
BV	28-N	1/4"NPT	11	15.5	17.4	14
BV	38-N	3/8"NPT	13.5	19	21	17
BV	48-N	1/2"NPT	16	22	24.2	22
BV	68-N	3/4"NPT	19.5	26.5	29	29
BV	88-N	1"NPT	22	30.7	33.3	34
BV	18-G	1/8"PS	6	9.9	11.8	11
BV	28-G	1/4"PS	8	12.5	14.5	14
BV	38-G	3/8"PS	8.9	14.4	16.5	17
BV	48-G	1/2"PS	10	16	18.2	22
BV	68-G	3/4"PS	10.2	17.9	20.4	29
BV	88-G	1"PS	11.9	19.9	22.5	34